
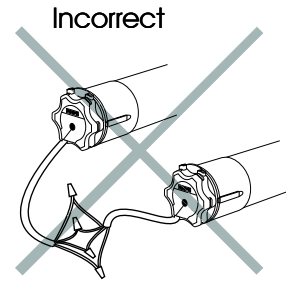




## LT50/60

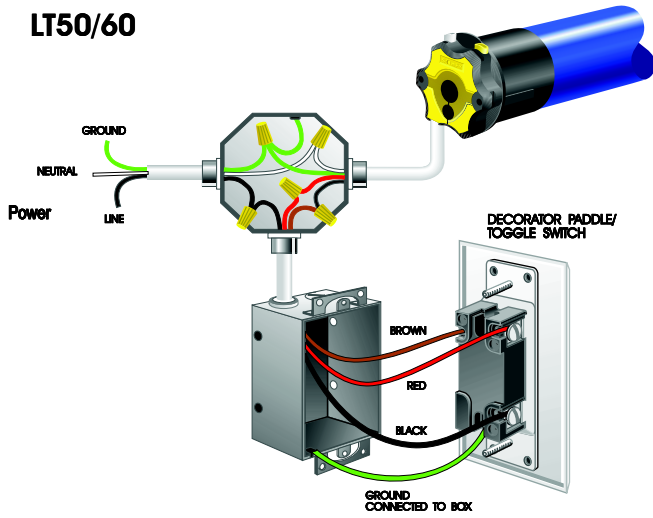


**WARNING:**

Do not wire two or more LT operators to one single pole switch. This will cause the motors to malfunction.


## LT50/60 CMO

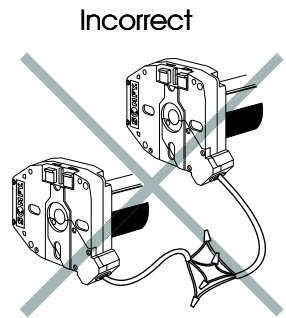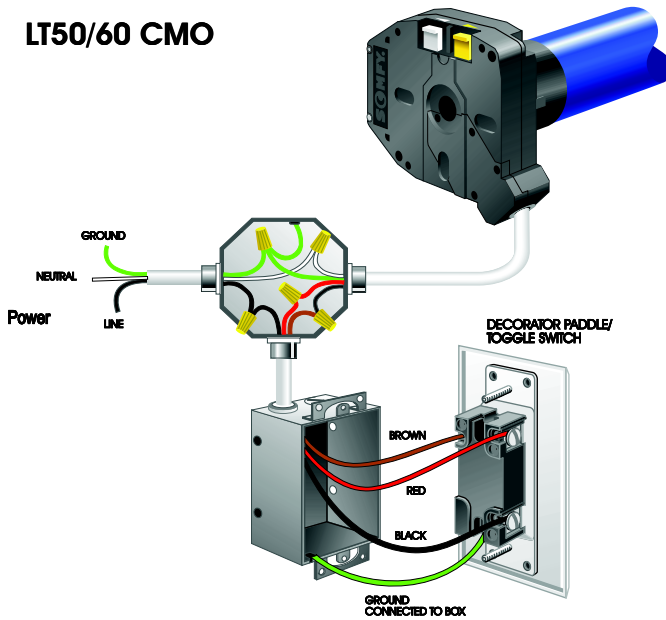

## LT50 ALTUS RTS

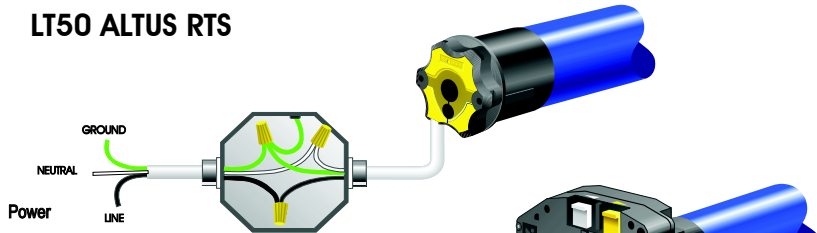

## LT50 RTS CMO

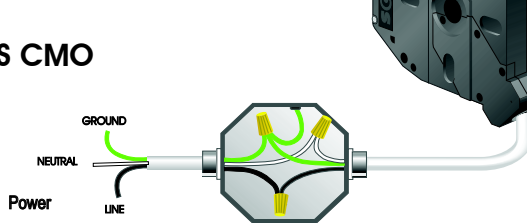

### LT MOTOR WIRING COLOR CODE

120V AC	CODE
BLACK	WHITE PUSH-BUT TON
RED	YELL OW PUSH-BUT TON
WHITE	(C) COMMON
GREEN	(G) GROUND

Note: Only RTS and IL T motors can be wired in parallel.

### LT50 ALTUS RTS AND LT50 RTS CMO MOTOR WIRING COLOR CODE

120V AC	CODE
BLACK	(H) HOT
WHITE	(N) NEUTRAL
GREEN	(G) GROUND